

NAME OF THE PARTS:

1. Handle
2. Switch
3. Top lid
4. Suction hole
5. Power cord and plug
6. Hook
7. Tank
8. Suction hose
9. Nozzle
10. Dust/liquid suction accessory
11. Telescopic hose



TECHNICAL CHARACTERISTICS:

Item code:	PRASP81LX3
Description:	Wet and dry vacuum cleaner with tools socket
Input:	230 - 50 Hz
Power:	3 x 1000 W
Protection class:	II
Bin capacity:	80 litres
Type of filter:	Cloth filter
Length of pipe:	Plastic hose 1.5 m long

GENERAL SAFETY NOTES:

- Do not expose the product to inclement weather (e.g. rain, snow...) or damp.
- Warning! Risk of injury and/or damage and/or deterioration of the product in the event of non-compliance with the safety requirements.
- Read the instruction manual.
- Equipment with Class II protection.
- Keep people (children) and animals away from the product and the work area.
- Remove the plug from the mains before carrying out any work, maintenance or cleaning operation on the product or when the product is not in use.
- Disconnect the power cord if the cord itself or the product has been damaged during use.
- Disconnect the product by removing the plug from the socket. Do not pull the cord.
- Do not dispose of this product together with ordinary urban waste. The product must be suitably disposed of to ensure that the parts are recycled. Contact the local authority in charge or a waste disposal company for further information concerning the disposal methods.

SAFETY INSTRUCTIONS

Before using this product, read all the safety instructions and check that they are clear. Always follow the safety instructions to avoid any risk of injury, electric shock, fire or damage. Keep this manual safely.

READ ALL THE INFORMATION BEFORE USING THE PRODUCT.

- Keep the work area tidy.
 - Untidiness in the work area increases the risk of accidents.
 - Always bear in mind the influence of environmental factors.
 - Never expose the product to rain or damp.
 - Do not use the product in the presence of water or damp.
 - Make sure that the lighting is good (sunlight or artificial light).
 - Do not use the product in an explosive atmosphere (close to combustible liquids or gas.)
 - Keep the product away from children.
 - Do not let other people touch the product or the cord.
 - Keep other people (e.g. children) away from the product and the work area.
 - Keep the product out of children's reach and, in any case, away from their environments. Do not allow children to use the product. Children must be supervised to ensure that they do not play with the equipment.
 - Store the product in a safe place.
 - When not in use, the product must be kept in a dry room under lock and key so that it is not accessible to children.
 - Do not damage the power cord.
 - Do not pull or move the product by the cord and do not pull the cord to remove the plug from the socket.
 - Protect the cord from heat, oil and sharp edges.
 - Check the power cord every so often and, if it is damaged, have it replaced by an authorised repair service.
 - Check the extension cords every so often and replace them if they are damaged.
 - If the plug or the power cord are damaged they must be replaced with a plug and power cord set identical to the original.
 - Always remove the plug.
 - Always remove the plug when the product is not in use and before any maintenance procedure.
 - Use of extension cords.
 - When the product is used with an extension cord, only use extension cords designed and produced to withstand the current used to operate the equipment.
 - Always pay attention.
 - Look at what you are doing. Be sensible.
 - Do not use the product if you are not concentrating, if you are tired or under the influence of alcohol, medicine or drugs.
 - Check that the product is not damaged.
 - Before continuing to use the product check carefully that there is no damage and that the safety devices work properly.
-


- If the switch is damaged it must be replaced by a repair workshop.
- Never use the product if the switch cannot be turned on or off.
- Warning!
- The use of accessories other than those recommended in the operating instructions may lead to a risk of injury to people and animals or damage to property.
- The product user and/or operator are the only people responsible for any damage to property or injuries to people.
- Repairs must only be carried out by a qualified electrician.
- Damaged parts must be repaired or replaced by a repair workshop unless otherwise stated in the operating instructions. This product complies with the relative safety regulations.
- Repairs can only be carried out by a qualified electrician, otherwise the operator could be injured.
- For safety reasons, only accessories and additional devices specified in the operating instructions or recommended by the manufacturer must be used.

Notes:

The safety instructions given in this manual are not able to illustrate fully all the conditions and situations that may arise. The user and/or operator must use the product sensibly and with care especially with regard to events that are not specified in this manual.

PRODUCT SAFETY INSTRUCTIONS

- Become familiar with the controls and the proper use of the product.
- Use of this product is forbidden by children and adolescents.
- The equipment can only be used by adults who have been properly trained to do so.
- This product is not suitable for use by people (including children) with reduced physical, sensorial or mental capacities, or by those lacking the necessary skill and experience, unless they are supervised or trained to use the equipment by a person responsible for their safety.
- Do not use the product if it is damaged.
- If the power cord is damaged, it must be replaced by the manufacturer, the customer service or by a person with appropriate qualifications to avoid any risk of danger.
- If the power cord or the extension cord shows signs of wear or has been damaged while the product is in use, remove the plug from the socket immediately.
- Do not touch the power cord or the extension cord before the plug has been removed from the socket.
- Under no circumstances must the following be picked up with the vacuum cleaner:
- Lit matches or cigarettes, burning embers, inflammable materials, corrosive and explosive materials in the form of gases or liquids, sharp objects or those with cutting edges.
- The product is not suitable for vacuuming dust that is dangerous for the health.
- The product must only be connected to a normal earthed 220 Volt 50/60 Hz socket.

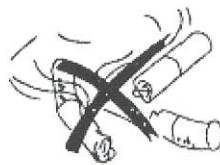


TO START

Unpacking the product

- Remove the product from the packing using the handle provided.
- Check that neither the equipment nor the accessories have been damaged.
- Loosen the fastening hooks.
- Remove the vacuum unit.

- Take out the contents of the bin and position the sponge filter and the bag filter.
- Insert the suction pipe into the hole at the side of the bin and tighten securely.

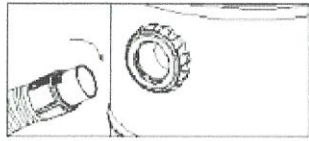

Starting and stopping the equipment

- Put the plug into a socket and press the switch. The product will start operating.



Vacuuming liquids

- Before vacuuming liquids, put the sponge filter in place. The product is provided with a float device and sponge filter to protect the motor from the vacuumed liquids.

CLEANING AND STORAGE

Before carrying out any operation, make sure the product is not connected to the mains.

Cleaning

Clean the plastic parts using just a suitable soft cloth. Do not use aggressive products (solvents, cleansing agents), or abrasive sponges, sharp objects or those with cutting edges. Never immerse the product in water or in any other liquid.

Cleaning the bin:

After vacuuming or when the bin is full of dust/liquid, the suction power decreases considerably. In this case, the plug must be removed and the bin emptied. To do this, release the two hooks, remove the top lid, the sponge filter and the cloth filter. Then empty out the dust or liquid. Replace the top lid and secure it in place with the two fastening hooks.

Storage

Store in a dry place under lock and key or out of children's reach.